


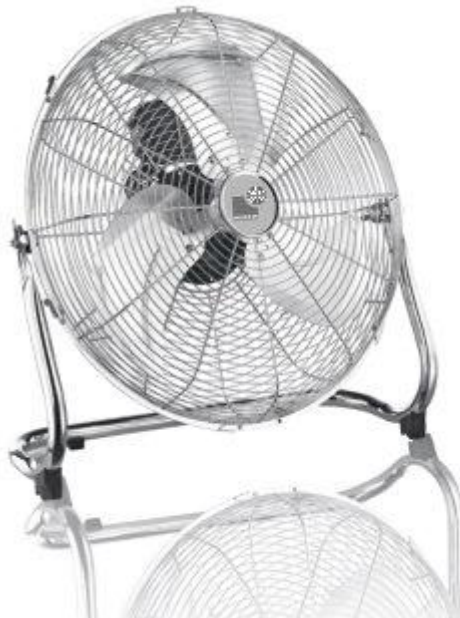


20 Inch Floor Fan

Please read these instructions carefully before installing and operating the appliance.



 www.morrisdirect.co.uk

 01562 261026

 Unit 4a, Thornleigh Trading Estate Dudley, West Midlands, DY2 8UB

Thank you for choosing the Morris 20" Floor Fan. This manual will provide you with valuable information necessary for the proper care and maintenance of your new product. Please take a few moments to thoroughly read the instructions and familiarize yourself with all the operational aspects of your new Morris Fan.

Technical and Electrical Data

MODEL	SIZE (Inch)	VOLTAGE (V)	FREQUENCY (Hz)	POWER (W)
MOR-20"FAN	20	230	50	120

Performance Instructions

HOW TO ADJUST TILT

- 1.Insert knob to tilt screw.
- 2.Use knob to loosen tilt screw by turning counter clockwise.
- 3.Adjust the fan head as required.
- 4.Tighten the tilt screw by turning clockwise.
- 5.Keep knob for future use.

CLEANING

WARNING: Unplug from electrical supply source before cleaning.

- Use soft damp cloth to clean. Then wipe with dry cloth.
- Do not use a cleaning solution that is harmful to paints or plastics.
- Do not bend the blades.
- The motor bearings are permanently sealed and do not require additional lubrication.

CAUTION

If using an extension cord with this product, the marked electrical rating of the cord set or extension cord should be at least as great as the electrical rating of the product. Never use the plug with an extension cord unless of the plug can be fully inserted into the extension cord.

Important Safety Instructions

- When using the appliance, you should notice the supply voltage must match the rating voltage shown on the label. (Allowing voltage deviates±5%)
- Before you start the fan, please check whether the fan blades and the cover grill are installed properly. Make sure the fan blade doesn't touch the grill, and the clips secure the grill well.
- Don't move the fan when it is on. You can move it when it is switched off and the fan blades have stopped revolving.
- Do not use the appliance in explosive, dusty, and vaporous air.
- Do not use the appliance in a place where the temperature is 40°C or higher.
- This appliance is not intended for use by a person (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- If the power cord is damaged, it must be replaced by the manufacturer or its service agent, or similar qualified persons, in order to avoid a hazard.
- To reduce the risk of electric shock, disconnect power before servicing.