



16" Stand Fan 3 In 1 Instruction Manual


Operating Instructions

INSTALLATION CAUTIONS

1. Never insert finger, pencils or any other object through the guard while fan is running.
2. Disconnect fan when moving from one location to another.
3. Disconnect fan when removing guards for cleaning.
4. Be sure fan is on a stable surface when operating to avoid falling over.
5. Do NOT put the fan near the window while raining.
Rain may create electrical hazard.

COLUMN ASSEMBLY

1. Extend extension pipe fully from column by loosening the height adjustment knob.
2. Attach column to stand with 4 screws as shown.
3. Slide stand ornament down column to rest on Stand.
4. Screw height adjustment knob back.
(CAUTION: Knob must be tightened before the next assembly step)

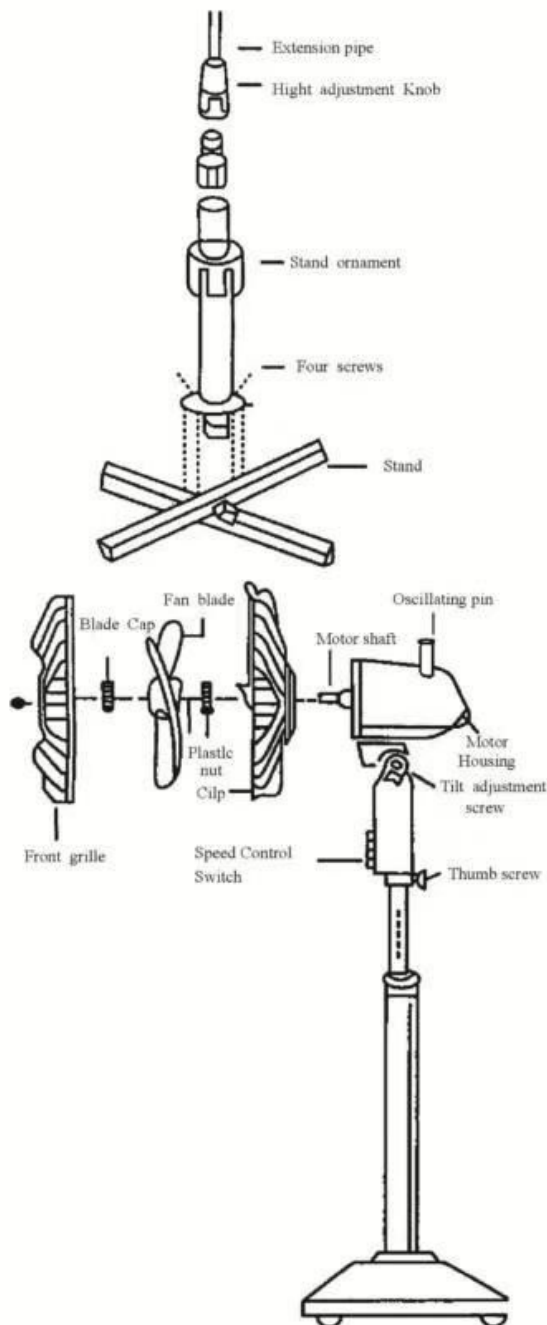

ASSEMBLY INSTRUCTIONS

1. Unscrew the blade cap clockwise and the nut counter clockwise, then remove them with the plastic sleeve on the motor shaft together.
2. Unscrew the screws on the edge of the rear grille.
3. Set the rear guard in the proper position with handle up.
4. Screw on plastic nut tightly to attach guard.
5. Install the blade onto the shaft until it reaches the fixing pin.
6. Screw the cap onto motor shaft counter clockwise.
7. Mount the front guard with the trademark placed in the proper direction, both guards together with clips.
8. Tighten three screws on the rear of grille through front grille.

OPERATION INSTRUCTIONS

1. To make or stop the fan oscillating, push down or pull up oscillating pin.
2. The air flow can be adjusted upward or downward by loosening the tilt adjustment screw and adjusting the vertical angle as desired, retighten the screw firmly.
3. The height of the fan can be adjusted by loosening the height adjustment knob carefully then raise or lower the fan, finally retighten the knob.
4. Speed is controlled by pushing the piano switch.
5. Make electrical connections to the power source.
6. If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similar qualified person. The noise level under normal operating conditions is less than 70dB(A).
7. This fan is not to be operated by children or a person with reduced mental capacity.